



WARNING: WIRE PANELS AND SHEET METAL PARTS MAY HAVE SHARP EDGES AND/OR CORNERS. USE EXTREME CAUTION WHEN UNPACKING, HANDLING AND ASSEMBLING CAGE PARTS, AND/OR WHEN USING HAND OR POWER TOOLS. PROTECTIVE GLOVES AND SAFETY GLASSES SHOULD BE WORN TO PREVENT INJURY.


NOTE: THESE INSTRUCTIONS ARE A GENERIC GUIDE TO AVIARY ASSEMBLY. SOME OPTIONS SHOWN MAY NOT HAVE BEEN ORDERED. SEE THE AVIARY PACKING LIST FOR A COMPLETE LIST OF ALL PARTS AND OPTIONS ORDERED. LAYOUT AND IDENTIFY ALL PARTS. CONSULT DEALER IF ANY PARTS ARE MISSING OR DAMAGED. MINOR BENDING OF PANELS DURING SHIPMENT CAN BE EASILY STRAIGHTENED AND WILL NOT AFFECT STRUCTURE OF CAGE, ONCE ASSEMBLED.


TOOLS REQUIRED: RING PLIERS, PHILLIPS SCREW DRIVER, TAPE MEASURE. A CORDLESS DRILL DRIVER AND HAMMER ARE REQUIRED IF INSTALLING OPTIONAL FLOOR FRAME.

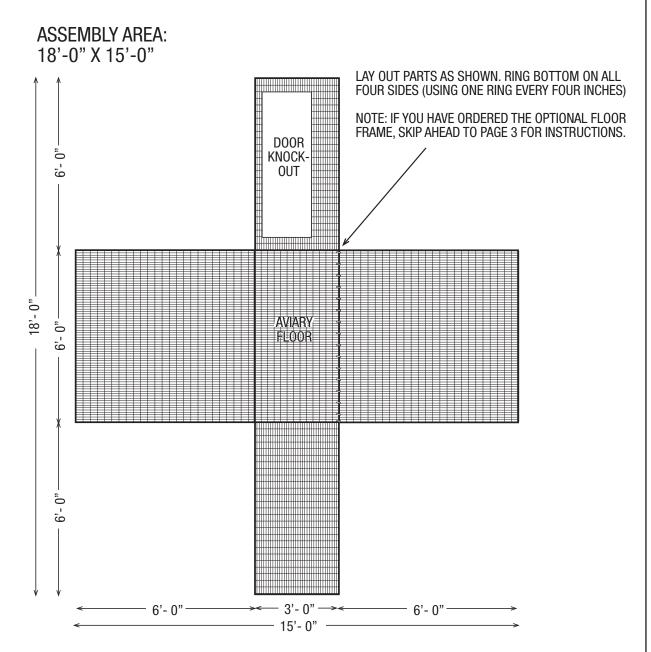


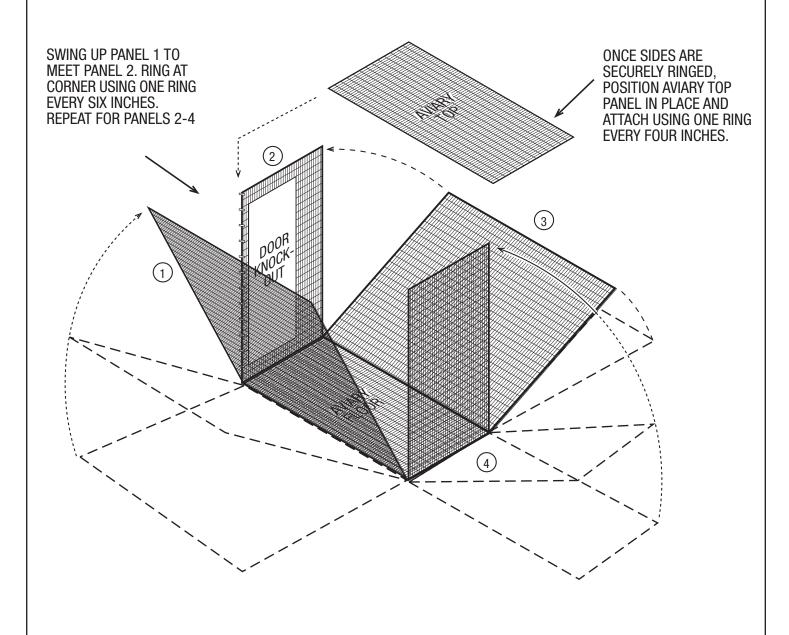





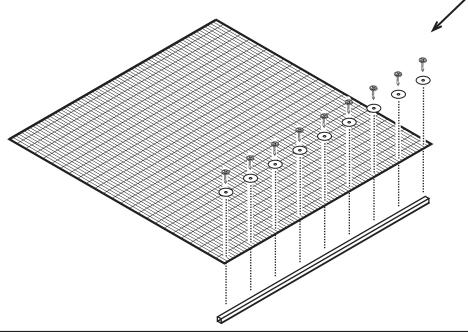

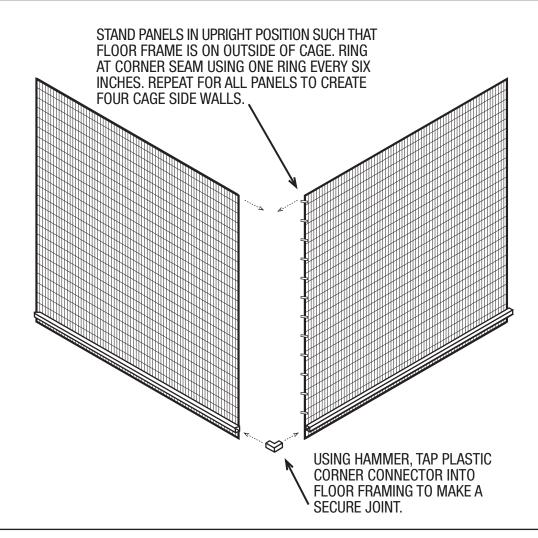



LINE DOOR AND JAMB ASSEMBLY UP WITH DOOR KNOCK-OUT. APPLY WASHERS AND SCREWS THROUGH AVIARY PANEL AND FINGER TIGHTEN INTO THREADED HOLES IN BACK OF DOOR. MAKE SURE DOOR IS PROPERLY LINED UP AND TIGHTEN FIRMLY WITH SCREW DRIVER. DO NOT OVERTIGHTEN. APPLY THREAD LOCKING COMPOUND IF USING WITH LARGE HOOK BILLS.

